





NOTE: SOME OF THE CIRCUITS SHOWN HERE WILL NOT BE ACTIVE IN ALL APPLICATIONS. CONSULT THE EQUIPMENT MANUFACTURE'S LITERATURE TO DETERMINE WHICH CIRCUITS ARE USED.

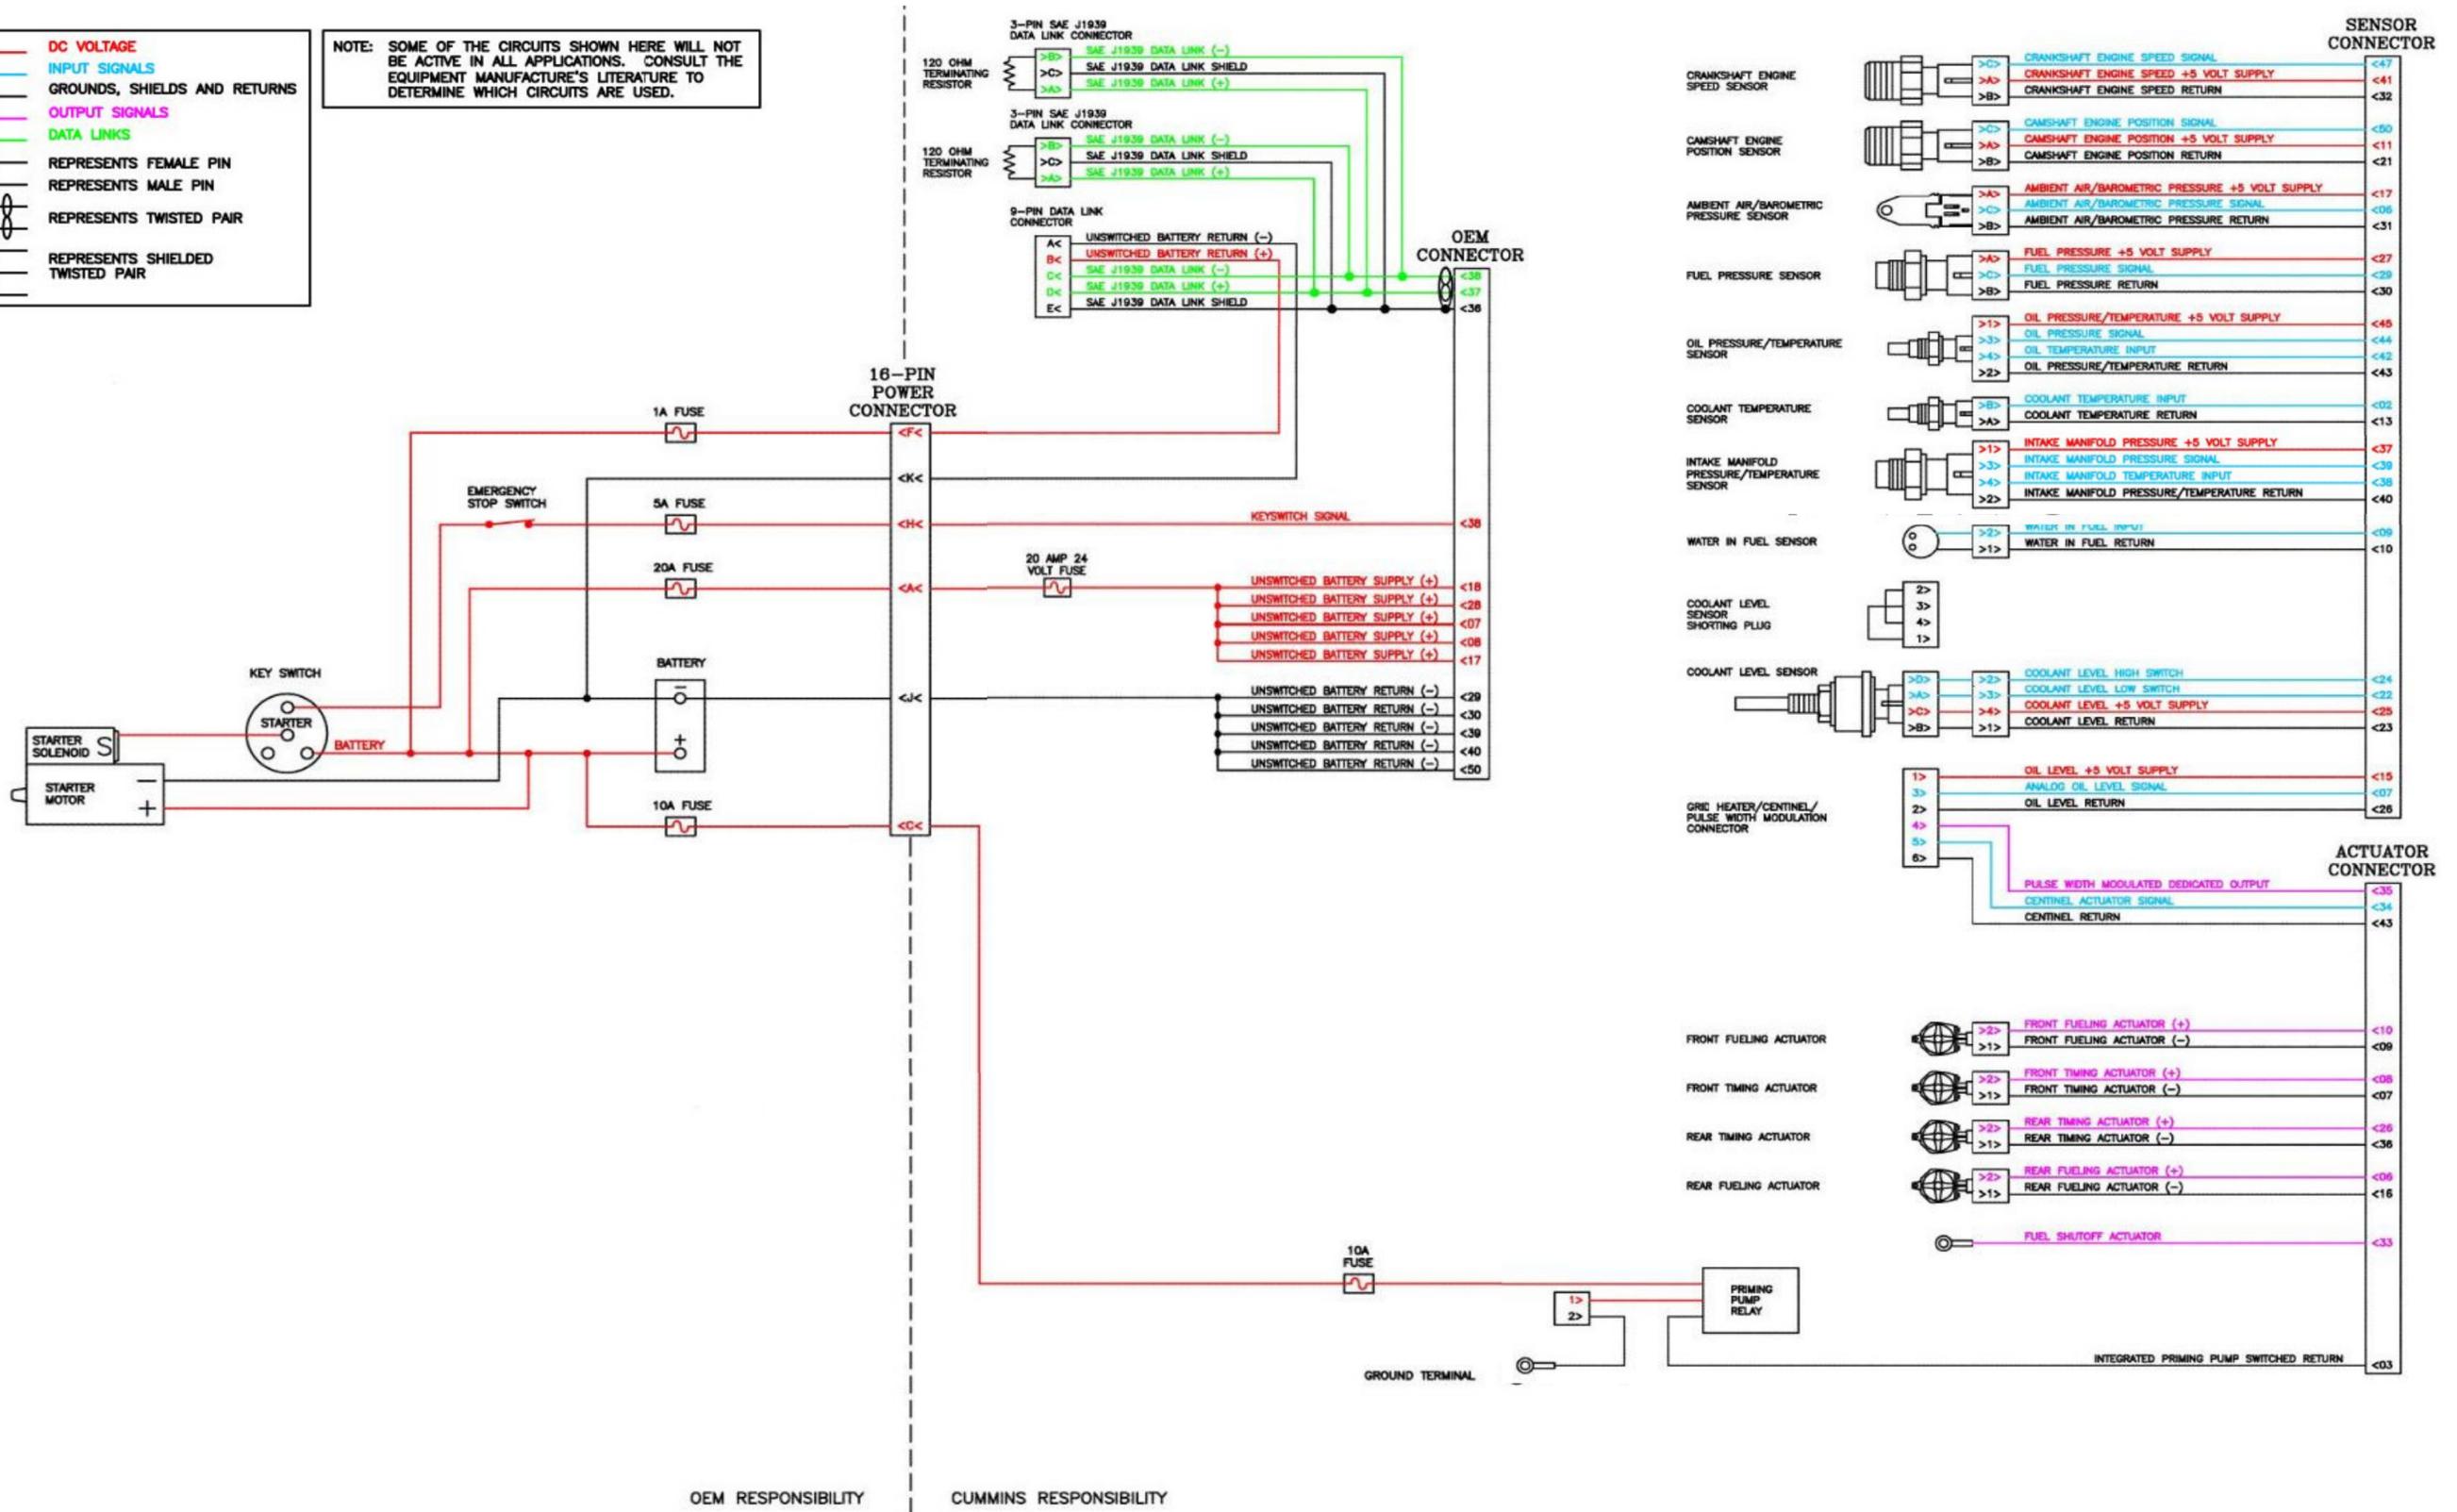


FUEL PRESSURE,
CRANKSHAFT
SPEED/POSITION,
CAMSHAFT
SPEED/POSITION SENSOR
CONNECTOR
MATING FACE

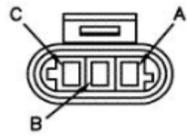


INTAKE MANIFOLD TEMPERATURE
AND PRESSURE, OIL
TEMPERATURE AND PRESSURE,
COOLANT LEVEL SENSOR
CONNECTOR
MATING FACE

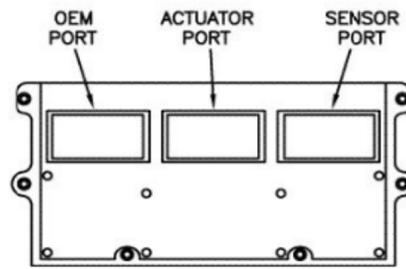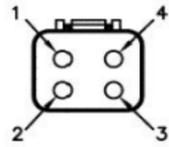

 
COOLANT TEMPERATURE
SENSOR CONNECTOR
MATING FACE



 
FUEL LIFT PUMP,
WATER IN FUEL, FUEL
AND TIMING ACTUATORS
CONNECTOR MATING FACE




OEM CONNECTOR VIEW
OF HARNESS CONNECTOR
MATING FACE

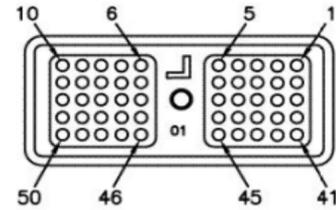


CENTINEL PWM
CONNECTOR MATING FACE

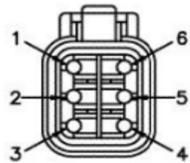


SAE J1939 ENGINE DATA
LINK CONNECTOR MATING
FACE

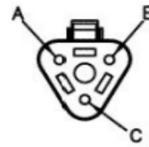


ACTUATOR CONNECTOR VIEW
OF HARNESS CONNECTOR
MATING FACE

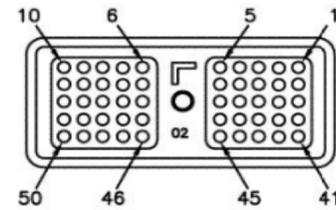

9-PIN SAE J1939
SERVICE PORT CONNECTOR
MATING FACE

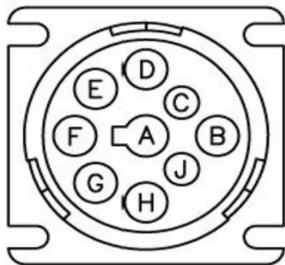

SENSOR CONNECTOR VIEW
OF HARNESS CONNECTOR
MATING FACE

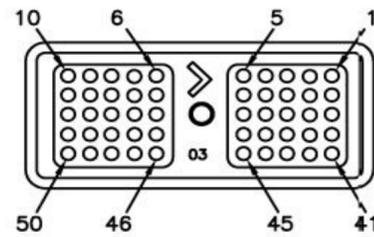

16-PIN POWER CONNECTOR
MATING FACE

